



WOVEN WIRE FENCE
END OR GATE LOCATION

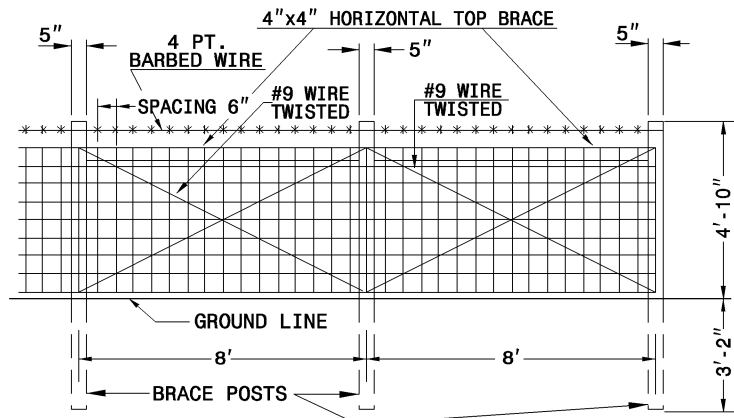


LINE BRACES
(MAXIMUM SPACING 324')

PLACE THE BRACE WIRE AROUND THE POST. DRAW WIRE TAUT BY TWISTING BETWEEN EACH POST. THIS APPLIES TO ALL BRACE WIRES. NOTCH POSTS FOR BRACES. PLACE TWO GALVANIZED 12d OR THREE GALVANIZED 10d ON ALL BRACES AT EACH END.

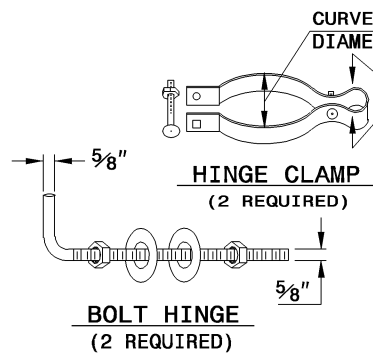


USE LATCH DEVICE APPROVED BY THE ENGINEER. HINGE ASSEMBLY, AS DETAILED, IS SUGGESTED. SUBSTITUTION MAY BE MADE SUBJECT TO APPROVAL BY THE ENGINEER. USE 1 3/8" DIAMETER GALVANIZED STEEL PIPE GATE FRAME EXCEPT AS SHOWN HERE.

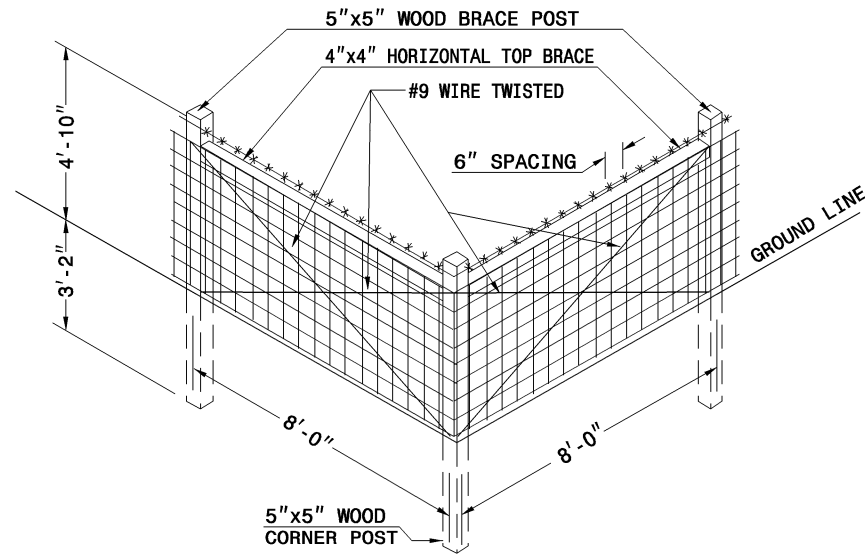


FENCE CORNER

USE WHEN CORNER ANGLE IS 15° OR GREATER

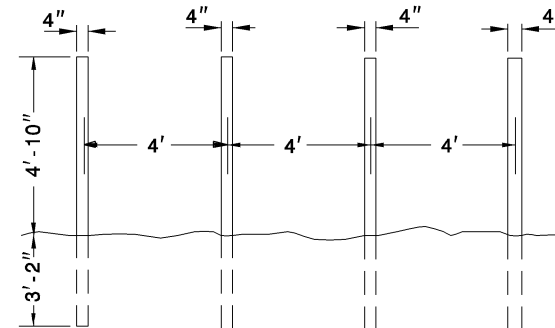

POST FOR BLOCKING DRIVEWAYS
OR OTHER ENTRANCES

INSTALL IN ADDITION TO FENCE WHERE SHOWN IN PLANS OR WHERE DIRECTED BY THE ENGINEER

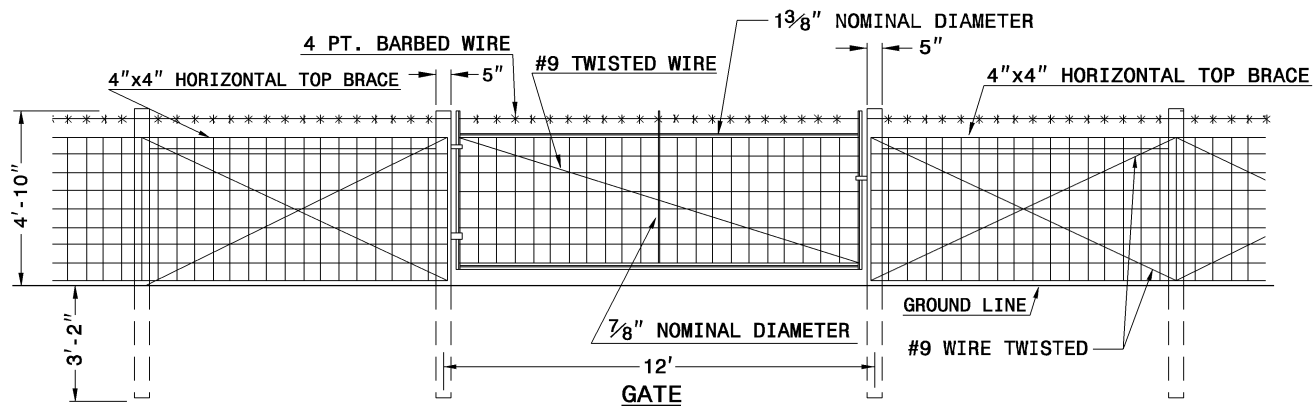

GATE